



Inflatable Movie Screen

CONTENTS:


Airblown® Inflatable Frame	1 pc
Movie Screen™	1 pc
Tether Stakes	8 pcs
Base Stakes	8 pcs
Nylon Tethers (4 Long, 4 Short)	8 pcs
Spare Fuse (5Amp, 125V)	1 pc
Storage Bag	1 pc

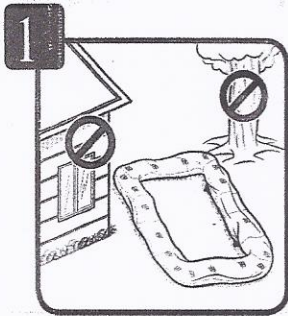


1 Remove contents from packaging and lay out deflated Airblown® Inflatable Movie Screen™ in a clear, flat area free of low overhangs, such as trees, eaves or anything else that could puncture or damage your Airblown® Inflatable.

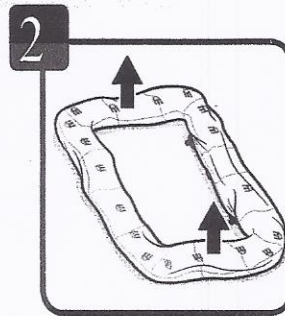


2 Ensure that your Airblown® Inflatable Frame is lying so that the side with the plastic clips is facing up.

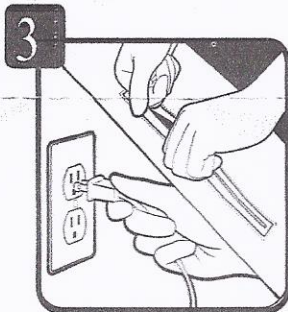


3 While item is still lying flat, please make sure the wire inside of Movie Screen™ are connected, plug cord into receptacle or other outlet device to inflate your Airblown® Inflatable Movie Screen™. This process may take a few minutes. Make sure the air intake is clear of fabric or other obstruction and zipper is fully closed.

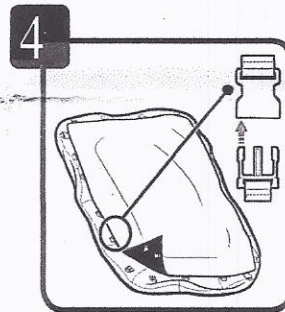


4 Attach Movie Screen™ to frame by connecting the clips along the edges and corners of the Movie Screen™. Locate the four legs on the bottom of the frame and unfold them completely.

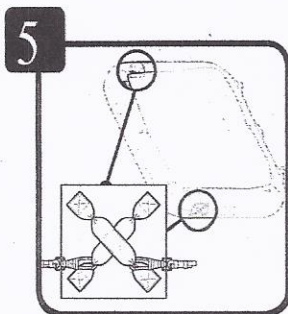


5 Attach 2 long nylon tethers to the upper "X"-shaped nylon strap on each side of the Airblown® Inflatable Movie Screen™.

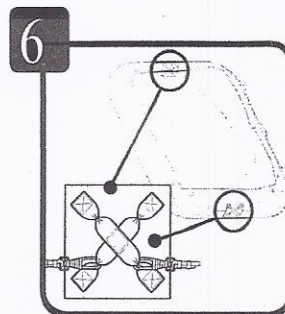

6 Attach 2 short nylon tethers to the lower "X"-shaped nylon strap on each side of the Airblown® Inflatable Movie Screen™.

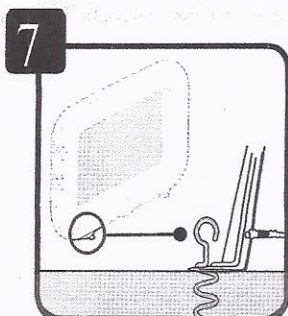

7 Stand the Airblown® Inflatable Movie Screen™ upright, ensuring that fans are located on the bottom. Locate the 8 Base Stakes and screw them into the ground through the provided holes in each leg of the stands.

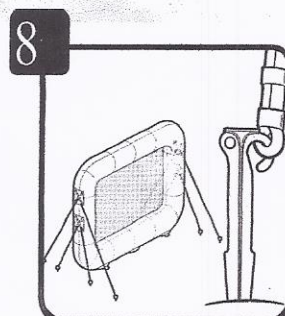

8 Insert the 8 tether stakes into ground and attach clips from nylon tethers to tether stakes, as shown.